

# Honeywell Vista 20P

## Quick Reference Chart

FUNCTION	ACTION
Arm system with motion detector	Enter code + 2 [AWAY]
Arm system without motion detector	Enter code + 3 [STAY]
Arm system, no motion detector, no ENTRY delay <i>There will always be an EXIT delay</i>	Enter code + 7 [INSTANT]
Disarm system	Enter code + 1 [OFF]
Bypass a zone <i>Example is zone #2</i>	Enter code + 6 + 02 + *
Change master code – if code is known	Enter master code + 8 + 02 + new code + new code again
Change master code – if code is unknown	CALL FOR SERVICE
Add user code to system <i>Example is user #3</i>	Enter master code + 8 + 03 + new code <i>Up to (48) 4-digit user codes – 03, 04, 05, etc.</i>
Delete user code from system <i>Example is user #3</i>	Enter master code + 8 + 03 + #0 <i>Up to (48) 4-digit user codes – 03, 04, 05, etc.</i>
Reset system after an alarm event	Enter code + 1 [OFF] to stop the sirens Enter code + 1 [OFF] again to reset the system
Turn chime feature ON or OFF	Enter code + 9 [CHIME]
Trip audible FIRE alarm, send FIRE signal	Hold <b>FIRE</b> button for 2 seconds
Trip audible police alarm, send panic signal	Hold <b>POLICE</b> button for 2 seconds
Arm system in the AWAY mode, no code needed	Hold <b>AWAY</b> button for 2 seconds
Arm system in the STAY mode, no code needed	Hold <b>STAY</b> button for 2 seconds