



ADEMCO

Vista 20SE

Keypad/Console Command Summary

Command / Function Name	Syntax	Comments/Notes
Entering Program Mode	Installers Code + 8 + 0 + 0 (default = 4112)	If this does not work then power down then up & hit * + # simultaneously within 50 seconds
Arming Away	Code + 2	This arming mode gives you exit & entry delays & arms perimeter & interior zones.
Arming Stay	Code + 3	This arming mode gives you exit & entry delays & arms perimeter zones.
Arming Instant	Code + 7	This arming mode gives you exit & no entry delay & arms perimeter zones.
Arming Maximum	Code + 4	This arming mode gives you exit but no entry delay & arms perimeter & interior zones.
Quick Arming	# + 2,3,4, or 7	Must have a master code programmed in user 2
Disarming	Code + 1	
Bypass	Code + 6 + Zone #	Always Enabled
Quick Forced Bypass	Code + 6 (wait 2 seconds)	If enabled in field *23
Chime Mode	Code + 9	Chimes on perimeter & entry/exit zones
Site-initiated download	Code + # + 1	Calls modem at offsite computer
Virgin Download	Code + # + 5	System must be defaulted & it will only answer 1 time after the 4 th ring.
Turning On Relay	Code + # + 7 + Relay Number	
Turning Off Relay	Code + # + 8 + Relay Number	
System Test	Code + 5	Code + 1 exits
Transmitter ID Sniffer Mode	Code + # + 3	Displays all numbers, which disappear when transmission is received, to exit hit code + 1
Go/No Go Test Mode	Code + # + 4	Puts receiver in ½ gain mode, to exit hit code + 1
House ID Sniffer Mode	Code + # + 2	Allows you to check the house ID on wireless devices.
Adding User Codes	Installer/Master code + 8 + user 03-15 + new code	15 is arm only
Adding Duress Code	Master code + 8 + 16 + Duress code	
Adding a master code	Installer code + 8 + 01 + master code for P1 or Installer code + 8 + 02 + master code for P2	
Changing master code	Master code + 8 + 02 + new code + new code	

General Notes: